

Remote controller for p/n DCT210

Index	Button	Function
①		Power On/Off control
②	0 ... 9	Channel number
③	-	Dash Key
④	AUDIO	Key on the remote to change audio soundtrack (Multi-language).
⑤	MENU	Display the main Menu on screen.
⑥	EXIT	Exit key
⑦ ⑩	VOL+, VOL-	Increase or decrease the volume
⑧		OSD[on screen display] adjustment
⑨	OK	OSD[on screen display] selection key
⑪	RECALL	Return to previous channel
⑫	SIGNAL	Signal quality of current channels
⑬	TV PWR	Learn TV power key
⑭	INFO	Push this button to find out the program information of a selected channel.
⑮	HD/SD (SET)	Change HD/SD resolution (set function key)
⑯	SCAN	Auto scan channel
⑰	SUBTITLE	Select subtitle function
⑱	PG	Display the Simple Guide.
⑲ ⑳	CH-/CH+	Goes up or down through the channel numbers.
㉑	MUTE	Switch the sound off.
㉒	ZOOM	Zoom in or out image.

