

SET TOP TV TUNER

MODEL STR700

NTSC TV & CABLES



Firebird Systems, Inc.
Chatsworth, CA 91311 USA
Tel: (818) 349-7999

Before using your new TV Tuner, please read this instruction manual to prevent any damage. Put it away in a safe place for future references.

IMPORTANT

- Only indoor use.
- Only use the included mains adaptor.
- Do not try to open the equipment, may cause malfunction and warranty repeal.
- Clean only with a soft, dry cloth.


CONTENT

Verify all the included components inside of the box, otherwise go with your nearest dealer.

- 1 TV tuner
- 1 remote control
- 1 mains adapter
- 1 IR Extension
- 1 user manual

CONTROLS

Frontal Panel

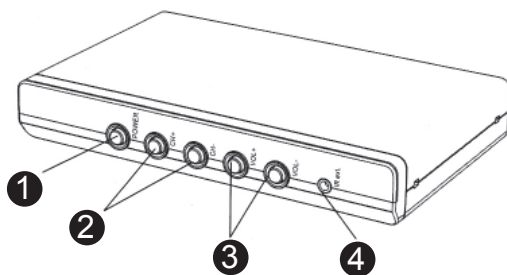

1.- Power

Power on / off the equipment

2.- Ch + / Ch -

Select the TV channels


3.- Vol + / Vol -

Set the volume level

4.- IR Ext.

IR extension jack

Rear Panel

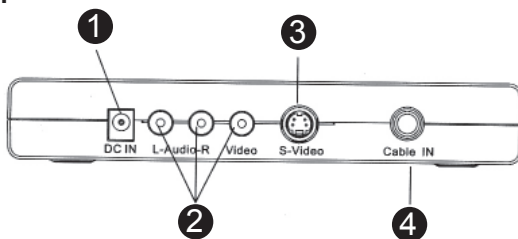

1.- DC IN jack

2.- Audio / Video jacks

Type RCA jacks


3.- S-Video jack

Type S-Video jack

4.- Cable IN

TV signal input

REMOTE CONTROL

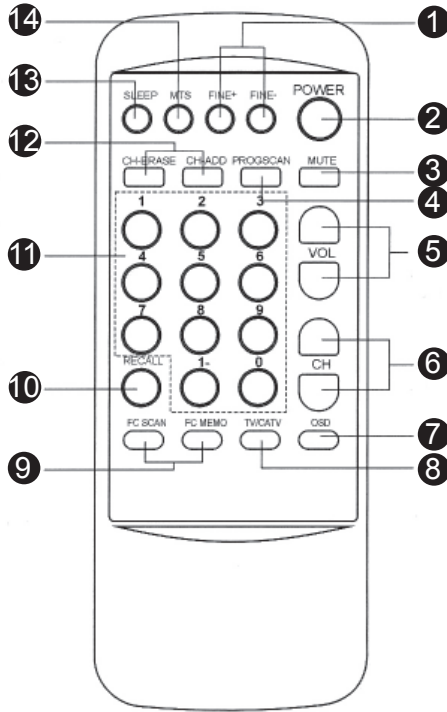

1.- Fine + / Fine -
Adjust tune frequency

2.- Power
Power on / Power off the
equipment

3.- Mute
Disable TV sound

4.- Prog Scan
Automatic TV channel scan

5.- Volume (Vol)
Set the volume level

6.- Channel (Ch)

Select the TV channels

7.- OSD

Shows information on screen

8.- TV / Cable

Choose the TV signal input

9.- FC Scan / FC Memo

Search and store your favorite TV channel

10.- Recall

Last TV channel recall

11.- Numerical keys

12.- CH-ERASE / CH-ADD

Add / Erase TV channels

13.- Sleep

Sleep timer


14.- MTS

Select the audio format: Mono, or Stereo



CONNECTIONS

- 1.- Connect the aerial antenna or cable to Cable In (4), located on back panel.
- 2.- Connect the A/V cable or S-Video cable on their corresponding jacks.
- 3.- Plug in the IR Extension. Stick it wherever you want.
- 4.- After all connections are completed, plug in the mains adaptor to household A/C Outlet.

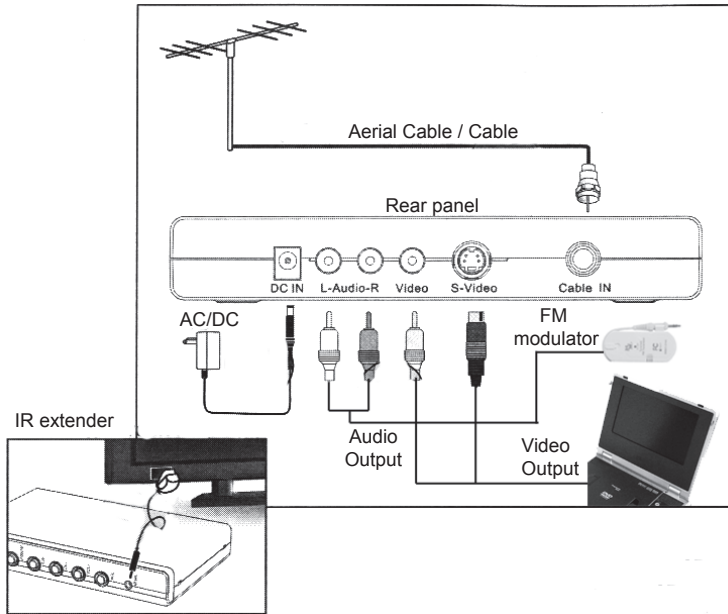

Probably it could be necessary to buy a FM modulator to listen audio on the car stereo.

REMOTE CONTROL FUNCTIONS

Auto shut-off (Sleep)

You can program a specific time to auto shut-off the equipment.
Press constantly Sleep to set desired auto shut-off time:
Off > 5 minutes > 10 minutes > 15 minutes > 30 minutes > 60 minutes > 90 minutes

MTS

You can choose the audio format from TV signal.
Press constantly MTS to choose audio format:
Mono: Audio hears in 1 channel
Stereo: Audio hears in 2 channels

Not all the channels are broadcasted with MTS function.

FINE + / FINE -

Adjust channel signal reception frequency.
In normal condition, we strongly recommend that you should not adjust the frequency; otherwise you will experience a distorted picture.

ADDING / ERASING CHANNELS (CH-ERASE / CH-ADD)

To add a channel on memory, search the desired channel and press CH-ADD.

To delete a channel on memory, search the desired channel and press CH-ERASE.

You can access to deleted channels, pressing numerical keys for a direct access.

AUTO- SEARCH (PROG SCAN)

If you press Prog Scan, then 4 options appears on screen to choose:

- a) Full Scan: Scan TV channels through all frequency band.
- b) Channel Scan: Scan TV channels from the frequency mapping of the TV system. If there are channels without video signal, it doesn't store in memory.
- c) Reset: Reset the TV tuner to factory settings.
- d) Exit: Exit from the setting menu.

STORING / DELETING FAVORITE CHANNELS (FC MEMO)

When you are viewing your favorite channel, press FC MEMO, on screen appears the message ADD FAVORITE CH; the channel will be stored in memory.

If you want to delete any stored channel, press FC MEMO once, and the channel will be deleted from memory.

SEARCHING FAVORITE CHANNELS (FC SCAN)

If you stored many favorite channels, press FC SCAN to tune one of those channels, if you press FC SCAN constantly, you jump to each one of your favorite channels stored in memory.

RECALL

When you press this key, TV Tuner will jump back to the previous channel.

NUMERICAL KEYS

Press the number keys to directly select a channel. If your TV system counts with more that 100 channels, press 1--.

Example: if you're looking for channel 102, press 1---, 0 and 2.

TROUBLESHOOTING

Trouble	Solution
No pictures	Verify that the antenna is correctly installed Verify that the mains adaptor is correctly installed Verify the right input signal, from aerial TV or cable
No sound	Verify all audio connections
The equipment doesn't respond when using remote control	Verify the IR Extension is correctly installed Verify that you are into 6 meters rank Verify batteries life.

SPECIFICATIONS

Demodulator

Input:	12V $\overline{=}$ 500mA
CATV Frequency:	54 - 806 mHz
Antenna:	54 - 216 mHz 470 - 806 mHz
Dimensions:	190 x 115 x 30mm
Weight:	3,3 lb

Remote Control

Input:	3V $\overline{=}$ (2 x AAA)
Distance:	8 m
Dimensions:	145 x 56 x 18 mm
Weight:	0,6 lb

AC power adapter

Input:	120V \sim 60Hz 15W
Output:	12V $\overline{=}$ 500mA

Design and specifications are subject to change without notice.

